


Notes:

1. Locate sensors at appropriate depths for plant material.
2. Make all wiring connections using waterproof connectors.
3. Replace 9 volt alkaline battery annually.
4. Set to OFF position for manual operation for maintenance.

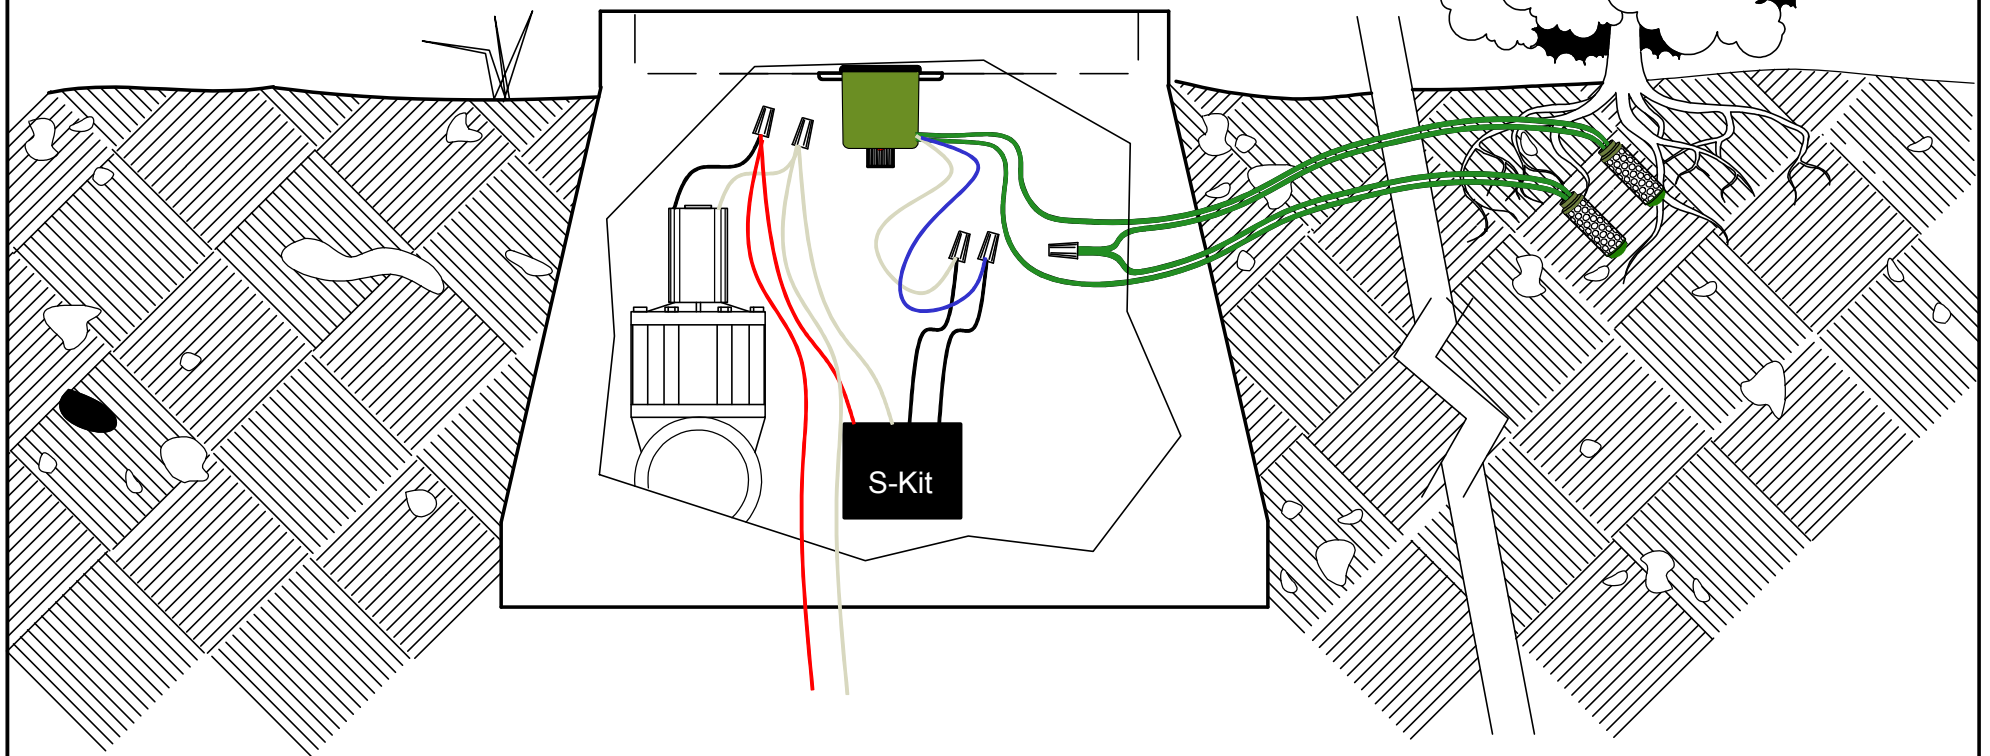

Watermark Electronic Module - Battery Version Installation with DIG LEIT S-Kit